5. Exploded View and Parts List

5-1 Ass'y CASE REAR - 5-2

5-2 Ass'y COVER HOUSING - 5-4

5-3 Ass'y CASE RIGHT - 5-6

5-4 Ass'y TOP - 5-8

5-5 Ass'y CASE LEFT - 5-10

5-6 Ass'y FRONT - 5-12

5-7 Ass'y LCD - 5-14

5-8 Ass'y CAMERA - 5-16

5-9 Ass'y CVF - 5-18

5-10 Ass'y EVF - 5-20

5-11 Mechanical Parts (1) - 5-22

5-12 Mechanical Parts (2) - 5-24

5-1 Ass'y CASE REAR

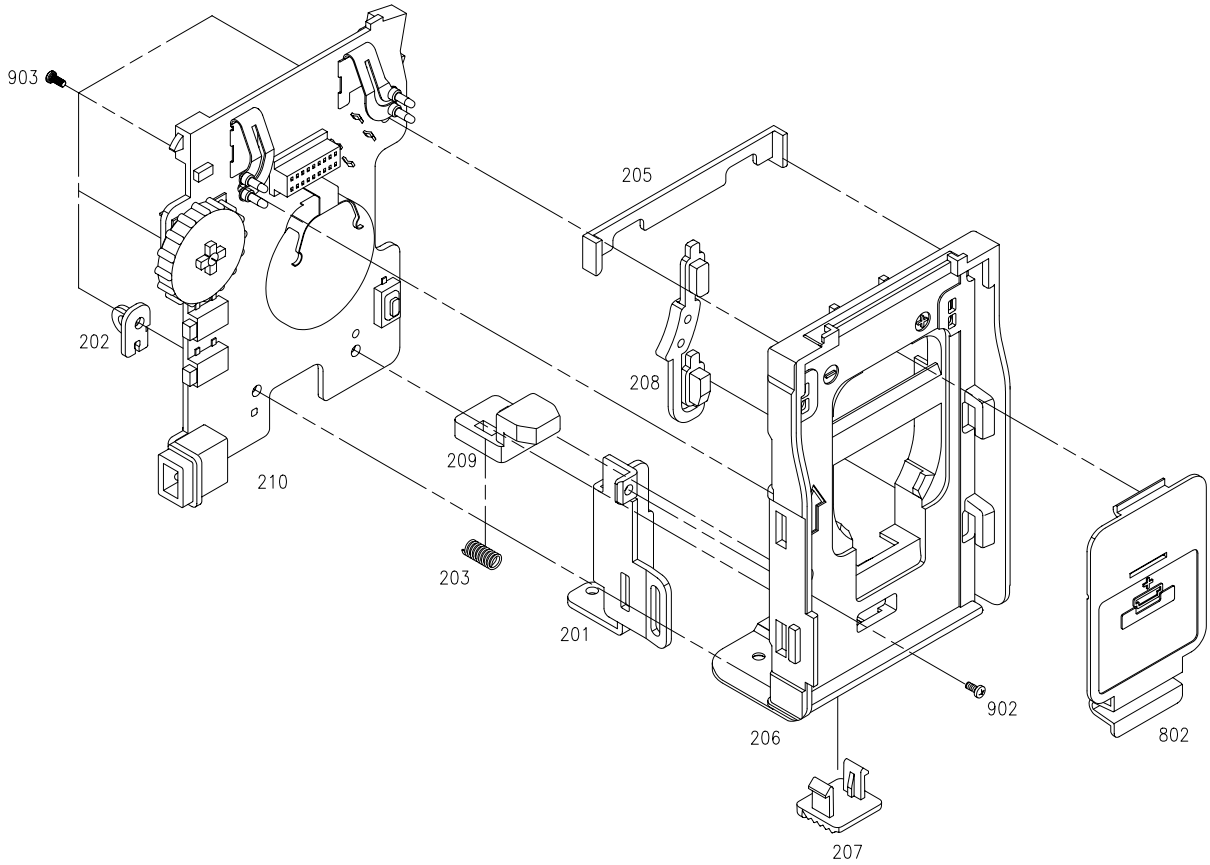

Loc. No	New Part No	Description and Specification	Remark
201	AD61-01008A	BRACKET-SHOULDER;BETA-PJ,SUS304-1/2H,T1.0	
202	AD61-01015A	BRACKET-JOINT;BETA-PJ,SECC,T0.8	
203	AD61-01043A	SPRING ETC-BATT EJECT;BETA-PJ,SUS304 WPB	
205	AD63-00357A	COVER-BATT HOLE;BETA-PJ,ABS	
206	AD64-00846A	CASE-REAR;BETA-PJ,ABS94HB,HF06601,G353	
207	AD64-00852A	KNOB-BATTERY EJECT;BETA-PJ,ABS 94HB	
208	AD64-00853A	KNOB-DITECTOR SWITCH;BETA-PJ,ABS 94HB HF0660I G35	
209	AD66-00168A	SLIDER-BATTERY EJECT;	
210	AD97-04526A	ASSY-REAR BOARD;BETA-PJ,POM,NAT	
802	AD63-00351A	COVER-LITUM BATTERY;BETA-PJ,POM G4092	
902	AC60-10028A	SCREW-MACHINE;ZPC,FE,+,M1.7,-,X3	
903	6002-001085	SCREW-TAP TITE BH;CH,+,2,M1.7,L5,ZPC(BLK),SWRCH18A	

5-2 Ass'y COVER HOUSING

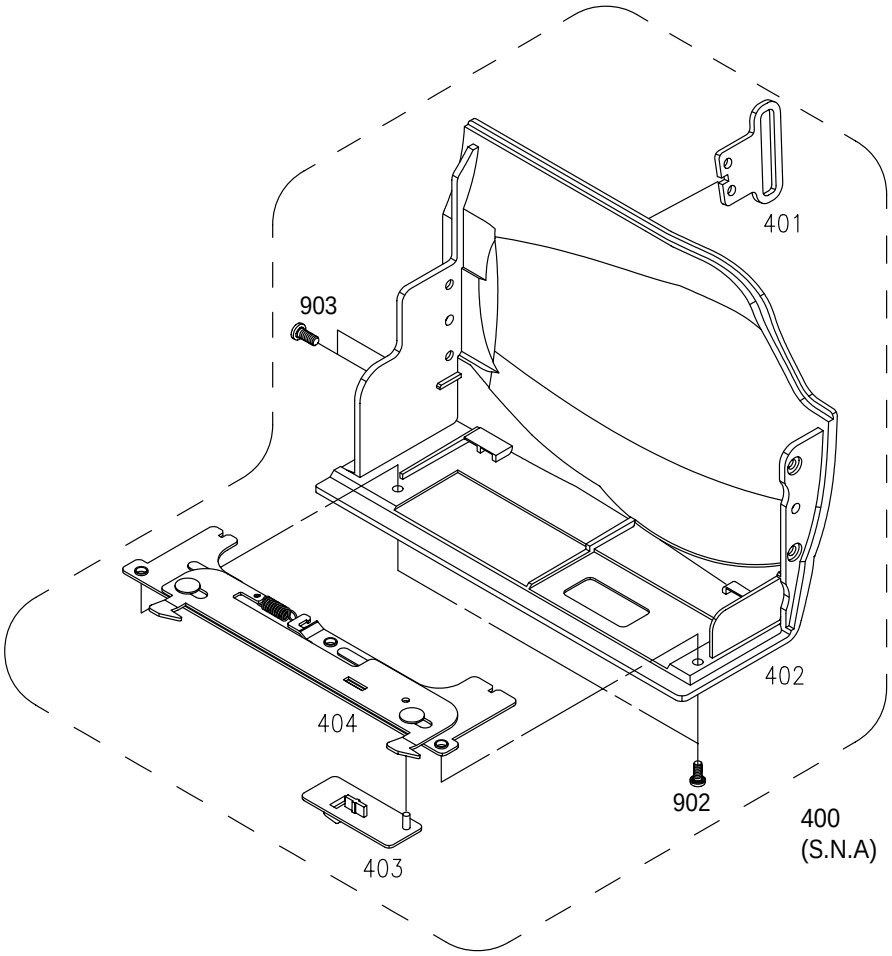

Loc. No	New Part No	Description and Specification	Remark
401	AD61-01001A	BRACKET-GRIP-FRONT;BETA-PJ,SUS304,T1.0	
402	AD63-00348A	COVER-HOUSING;BETA-PJ,PC+ABS	
403	AD64-00858A	KNOB-TAPE EJECT;BETA-PJ,ABS 94HB	
404	AD97-04814A	ASSY-TAPE EJECT;SUS,BETA-PJ	
902	AC60-10028A	SCREW-MACHINE;ZPC,FE,+,M1.7,X3	
903	6002-001085	SCREW-TAPPING;CH,+,2,M1.7,L5,ZPC(BLK),SWRCH18A	

5-3 Ass'y CASE RIGHT

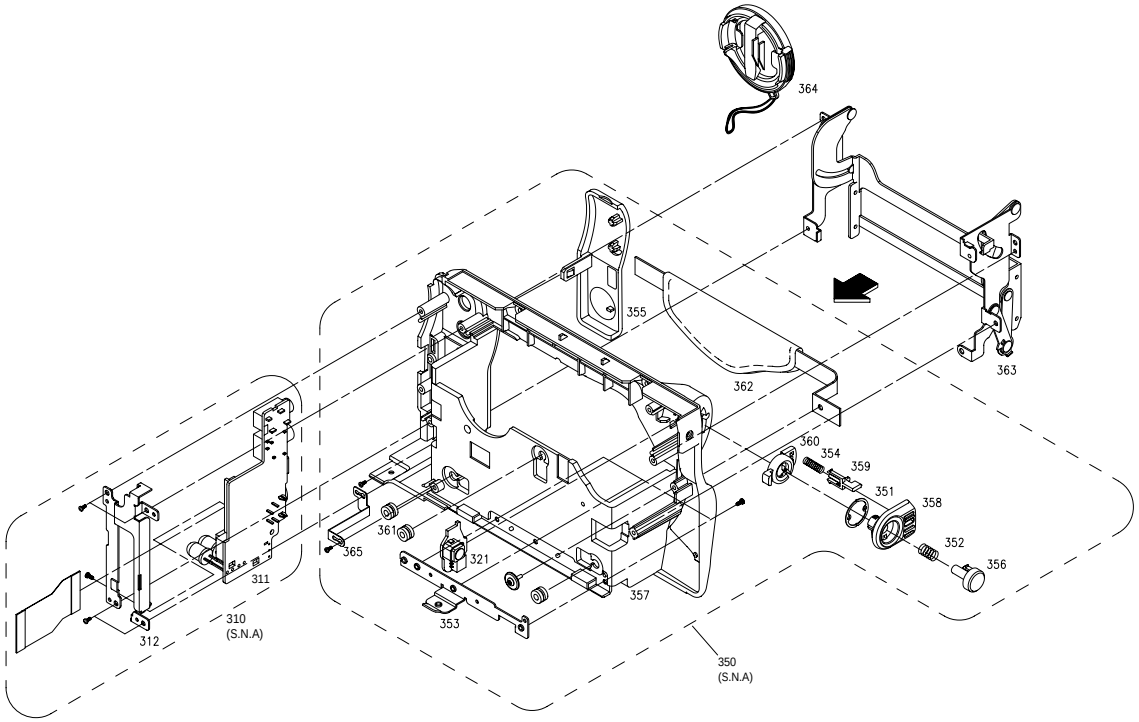

Loc. No	New Part No	Description and Specification	Remark
311	AD97-04552A	ASSY-JACK BOARD (USB:Y)	SCD86/87/VP-D85/D85i/D87D/ D87Di/D87/D87i/D81/D81i/ VM-B770/B3770/ VM-B710/B3710/B730
	AD97-05083A	ASSY-JACK BOARD (USB:N)	SCD80/VP-D80/D80i
312	AD61-01002A	BRACKET-JACK;	
321	AD97-05059A	ASSY-POWER BOARD;	
351	AD61-01031A	SPRING-PLATE RECORD;SUS T0.2 1/2H	
352	AD61-60521A	SPRING-REC;SUS304 WPB	
353	AD61-01041A	BRACKET-RIGHT;BETA-PJ,SUS	
354	AD61-60601A	SPRING-KNOB POWER;SUS304 WPB	
355	AD63-00349A	COVER-JACK;BETA-PJ,SILICON	
356	AD64-00838A	BUTTON-POWER RECORD;BETA-PJ,POM	
357	AD64-00847A	CASE-RIGHT (USB:Y,EXP);BETA-PJ,ABS94HB	VP-D81/D81i/SCD86/D87/ VP-D85/D85i/D87D/D87Di/D87/D87i
	AD64-00847B	CASE-RIGHT (USB:Y,DOM);BETA-PJ,ABS94HB	VM-B710/B3710/B730/B770/B3770
	AD64-00847C	CASE-RIGHT (USB:N,EXP);BETA-PJ,ABS94HB	SCD80/VP-D80/D80i
358	AD64-00856A	KNOB-POWER;BETA-PJ,ABS 94HB	
359	AD64-00861A	LOCKER-SAFETY POWER;BETA-PJ,ABS 94HB	
360	AD66-00169A	SLIDER-POWER;BETA-PJ,ABS 94HB	
361	AD73-00006A	RUBBER—GUIDE DECK;BUTHYL RUB,VP-D50	
362	AD97-04961A	ASSY-BELT GRIP;LEATHER,BETA-PJ	
363	AD97-04815A	ASSY-LINK;SUS,BETA-PJ	
364	AD97-05606A	ASSY-CAP HOOD;BETA-PJ	
365	AD61-01078A	PLATE-RIGHT;	

5-4 Ass'y TOP

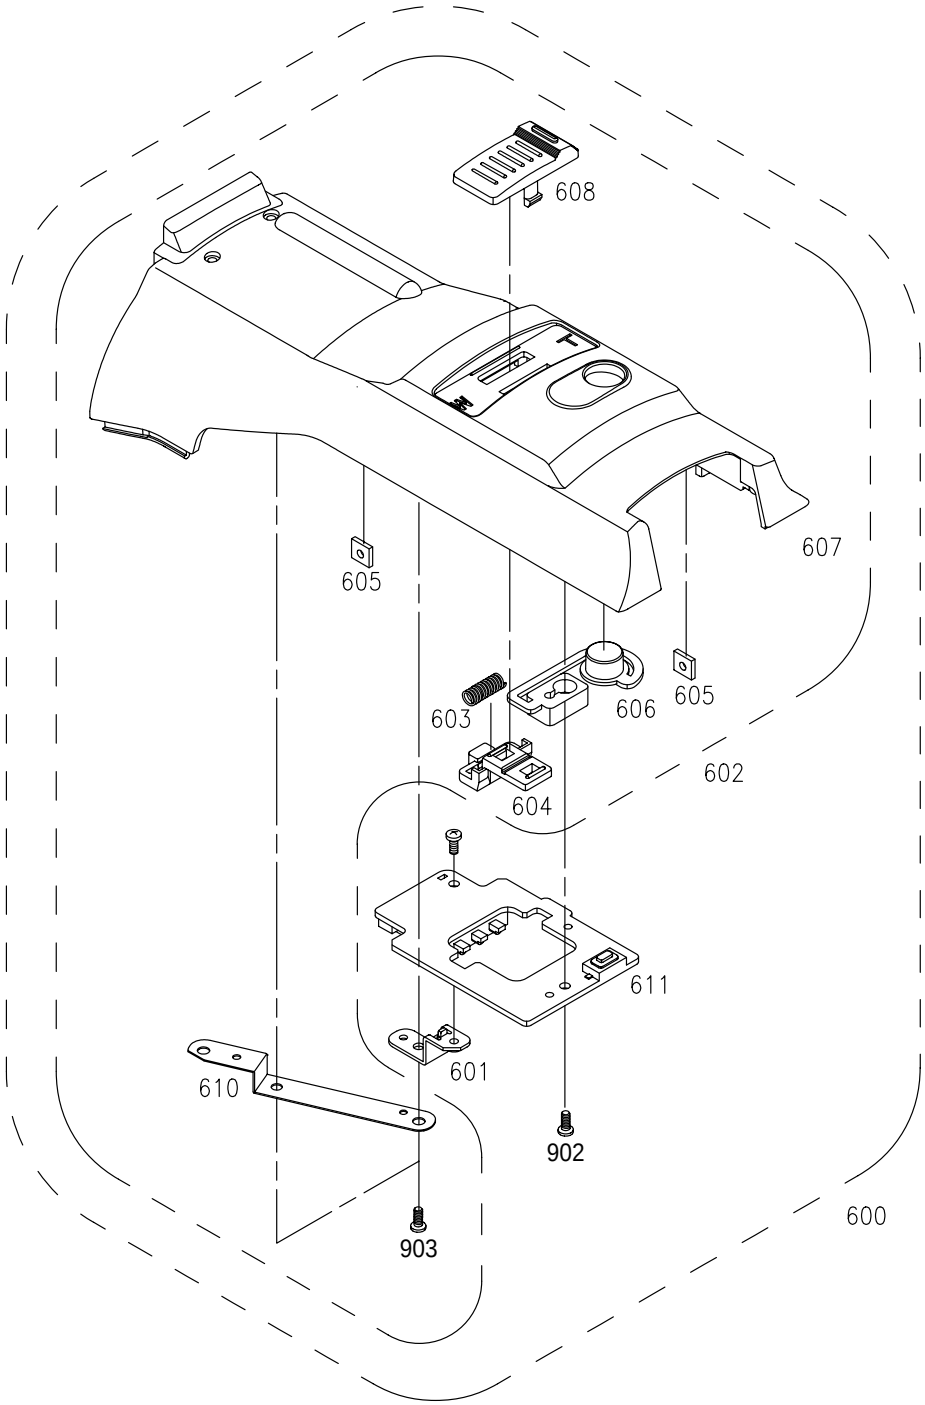

Loc. No	New Part No	Description and Specification	Remark
600	AD97-04990E	ASSY-TOP (MS(O);VP-D87D,BETA-PJ	SCD86/87/ VP-D85/D85i/D87D/D87Di/D87/D87i
	AD97-04990B	ASSY-TOP (MS(O);	VM-B770/B3770
	AD97-04990C	ASSY-TOP (MS(X);	SCD80/VP-D80/D80i/D81/D81i/
	AD97-04990D	ASSY-TOP (MS(X);	VM-B710/B3710/B730
601	AD61-01047A	BRACKET-TOP;BETA-PJ,SUS,T0.6	
602	AD97-04994A	ASSY-CASE TOP (MS(O);VP-D87D,BETA-PJ	SCD86/87/ VP-D85/D85i/D87D/D87Di/D87/D87i
	AD97-04994B	ASSY-CASE TOP (MS(O);	VM-B770/B3770
	AD97-04994C	ASSY-CASE TOP (MS(X);	SCD80/VP-D80/D80i/D81/D81i/
	AD97-04994D	ASSY-CASE TOP (MS(X);	VM-B710/B3710/B730
603	AD61-01032A	SPRING-ZOOM;VP-D80,SUS304-	
604	AD61-01025A	HOLDER-ZOOM;BETA-PJ,ABS 94HBNATUAL	
605	AD61-12033A	BRACKET-NUT;SV-D10,T0.8	
606	AD64-00837A	BUTTON-PHOTO;BETA-PJ,ABS94HB	
607	AD64-00848A	CASE-TOP (MS(O);BETA-PJ,ABS94HB	SCD86/87/ VP-D85/D85i/D87D/D87Di/D87/D87i
	AD64-00848B	CASE-TOP (MS(O);BETA-PJ,ABS94HB	VM-B770/B3770
	AD64-00848C	CASE-TOP (MS(X);BETA-PJ,ABS94HB	SCD80/VP-D80/D80i/D81/D81i/
	AD64-00848D	CASE-TOP (MS(X);BETA-PJ,ABS94HB	VM-B710/B3710/B730
608	AD64-00859A	KNOB-ZOOM;BETA-PJ,ABS 94HB	
610	AD61-01077A	PLATE-TOP;SPTE T0.25	
611	AD97-04646A	ASSY-TOP BOARD;	
902	AC60-10028A	SCREW-MACHINE;ZPC,FE,+,M1.7,X3	
903	6002-001085	SCREW-TAPPING;CH,+,2,M1.7,L5,ZPC(BLK),SWRCH18A	

5-5 Ass'y CASE LEFT

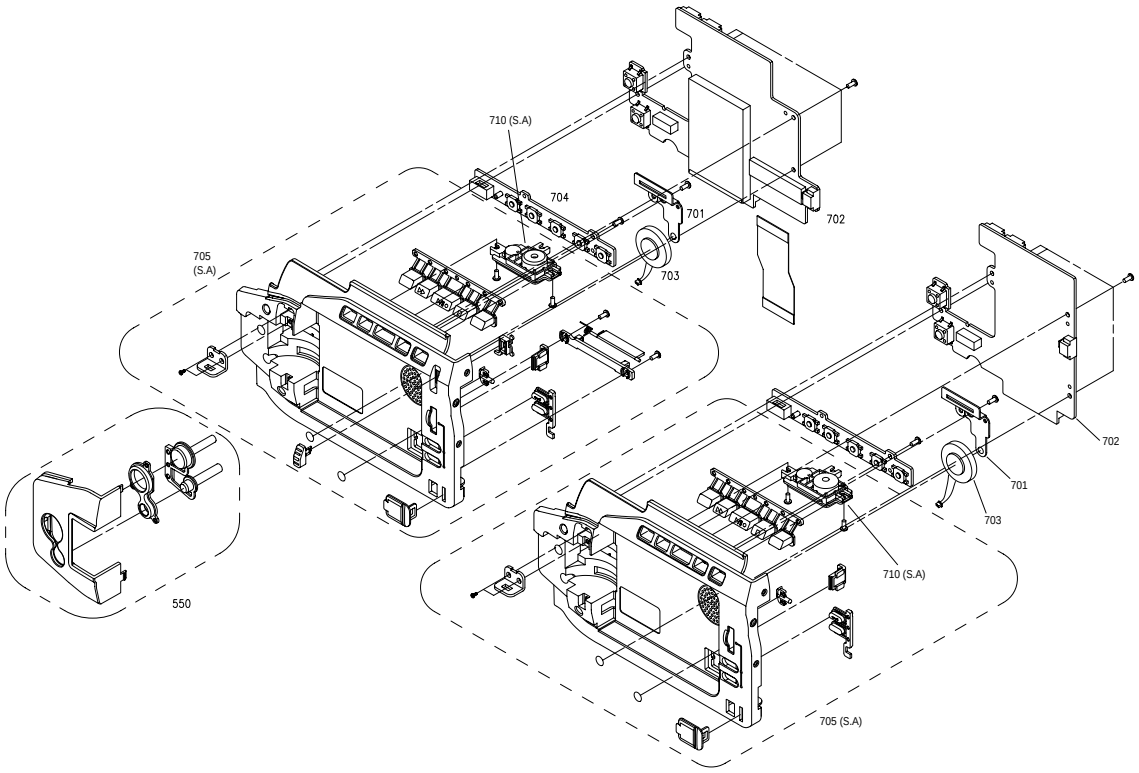

Loc. No	New Part No	Description and Specification	Remark
550	AD97-04987A	ASSY-COVER LEFT (EXP);VP-D87D,BETA-PJ	
550	AD97-04987B	ASSY-COVER LEFT (DOM);VM-B710, BETA-PJ	
701	AD61-01009A	BRACKET-SPEAKER;BETA-PJ,SUS	
702	AD97-04729A	ASSY-DSC BOARD;	SCD86/87/VP-D85/D85i/D87D/ D87Di/D87/D87i/ VM-B770/B3770
702	AD97-04647A	ASSY-FUNCTION;	SCD80/VP-D80/D80i/D81/D81i/ VM-B710/B3710/B730
703	AD97-02047A	ASSY-SPEAKER;	
704	AD97-04647A	ASSY-FUNCTION BOARD;	
705	AD97-04986A	UNIT-CASE LEFT(MS:Y , EXP);VP-D87D,BETA-PJ	SCD86/87/ VP-D85/D85i/D87D/D87Di/D87/D87i
705	AD97-04986B	UNIT-CASE LEFT (MS:Y);	VM-B770/B3770
705	AD97-04986C	UNIT-CASE LEFT(MS:N , EXP);	SCD80/VP-D80/D80i/D81/D81i
705	AD97-04986D	UNIT-CASE LEFT(MS:N);	VM-B710/B3710/B730
710	AD61-01033A	BASE-TRIPOD(BETA);BETA-PJ,PC,	
901	6001-001291	SCREW-MACHINE;CH(0.5),*,M1.7,L4,NI PLT,SWRCH18A,FP	
907	6003-000233	SCREW-TAPTITE;PH,+,B,M2,L6,CBLACK,SWRCH18A	
916	AC60-12128A	SCREW-TAP TITE BH;FE,BH,4 1.7,I4,BLK,	
916	AC60-12128A	SCREW-TAP TITE BH;FE,BH,4 1.7,I4,BLK	

5-6 Ass'y FRONT

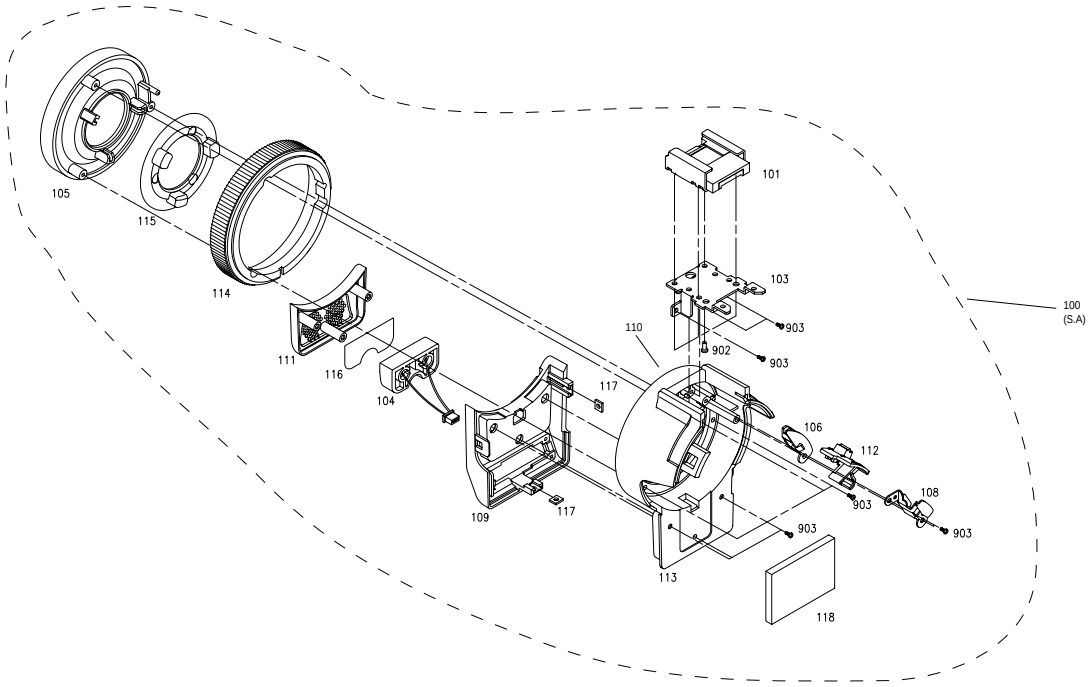

Loc. No	New Part No	Description and Specification	Remark
100	AD97-04980A	ASSY-FRONT(PAL,SHOE,400X)	VM-B730/B770/B3770/ VP-D85/D85i/D87/D87i
	AD97-04980B	ASSY-FRONT(NT,SHOE,400X)	SCD87
	AD97-04980E	ASSY-FRONT(PAL,SHOE,500X)	VP-D87D/D87Di
	AD97-04980C	ASSY-FRONT(PAL,ACC SHOE,400X)	VP-D80/D80i/D81/D81i/VM-B710
	AD97-04980F	ASSY-FRONT(PAL,ACC SHOE,500X)	VM-B3710
	AD97-04980D	ASSY-FRONT(NT,ACC SHOE,400X)	SCD80/D86
101	AD97-04358A	ASSY-SHOE MAIN;	
103	AD61-01005A	BRACKET-SHOE;BETA-PJ,SUS304,T0.8	
104	AD97-05082A	ASSY-MIC;	
105	AD61-01020A	HOLDER-LENS HOOD;BETA-PJ,PC	
106	AD61-01022A	HOLDER-NIGHT FIX;BETA-PJ,POM	
108	AD61-01046A	BRACKET-NIGHT FIX;BETA-PJ,SUS304 1/2H,T0.5	
109	AD63-00345A	COVER-FRONT;BETA-PJ,ABS 94HB	
110	AD64-00841A	CASE-FRONT(PAL,400X);BETA-PJ,ABS 94HB	VP-D80/D80i/D81/D81i/ VM-B730/ VP-D85/D85i/D87/D87i/ VM-B770
	AD64-00841C	CASE-FRONT(PAL,500X);	VM-B3710/VP-D87D/D87Di/ VM-B3770
	AD64-00841B	CASE-FRONT(NT,400X);	SCD80//86/87
111	AD64-00850A	GRILLE-MIC;BETA-PJ,ABS 94HB	
112	AD64-00855A	KNOB-NIGHT FIX;BETA-PJ,ABS 94HB	
113	AD64-00862A	WINDOW REMOCON;BETA-PJ,PMMA	
114	AD67-00174A	LENS-HOOD(AL);BETA-PJ,AL	
115	AD73-00085A	RUBBER-HOOD;	
116	AD63-00369A	SHEET-MIC;HIMERON BLK T0.2	
117	AD61-12033A	BRKT-NUT;	
118	AD69-00370A	PAD-SPONGE MIC;	
902	AC60-10028A	SCREW-MACHINE;ZPC,FE,+,M1.7,X3	
903	6002-001085	SCREW-TAP TITE BH;CH,+,2,M1.7,L5,ZPC(BLK),SWRCH18A	

5-7 Ass'y LCD

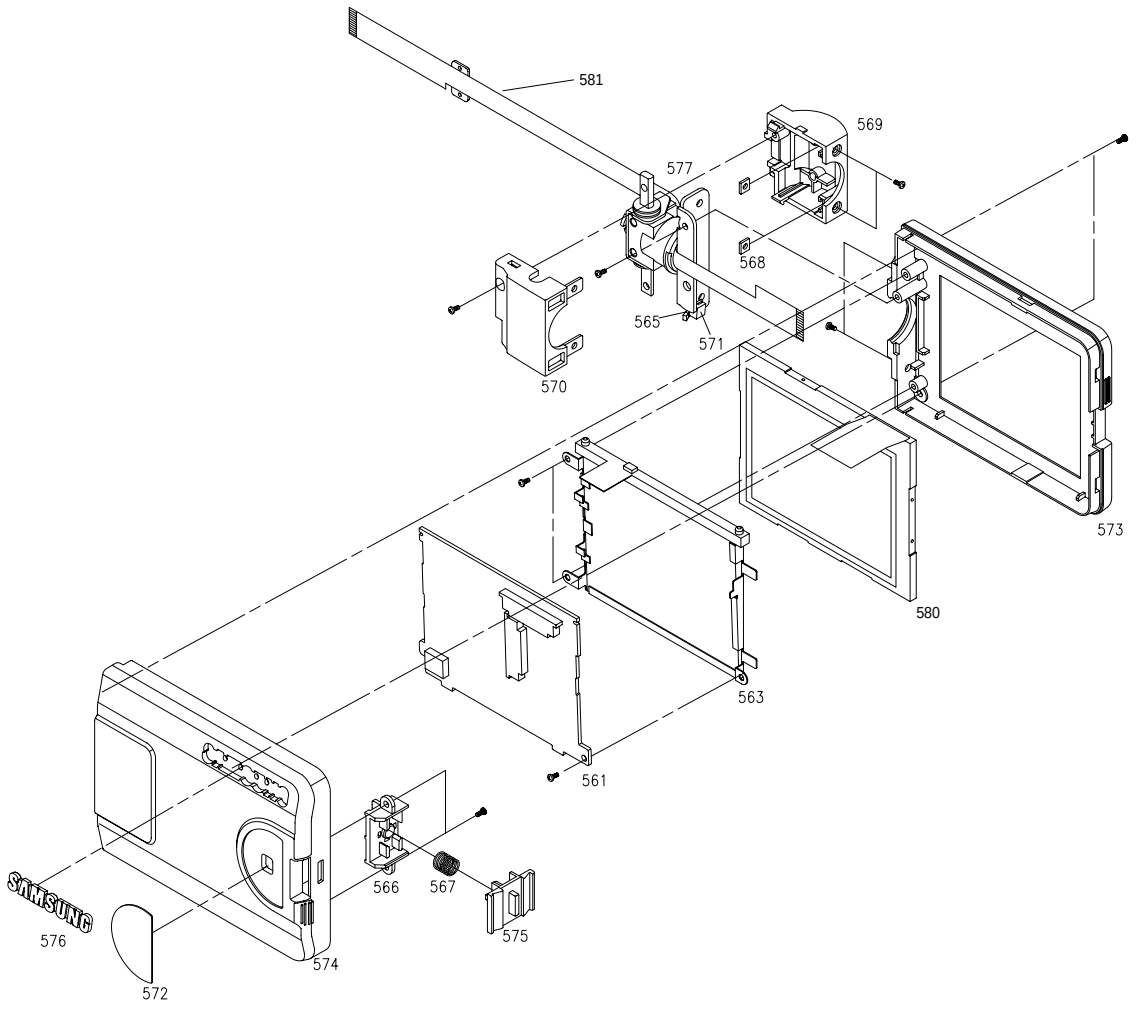
581
569
577
568
565
571
570
573
580
563
561
566
567
575
576
574
572

Loc. No	New Part No	Description and Specification	Remark
561	AD97-04848A	ASSY-LCD BOARD (PVI);	SCD80/VP-D80/D80i/D81/D81i/ SCD86/VP-D87D/D87Di
	AD97-04749A	ASSY-LCD BOARD (SONY);	VM-B710/B3710/B730/ SCD87/VP-D85/D85i/D87/D87i/ VM-B770/B3770
563	AD97-04556A	ASSY-BACK LIGHT;	
565	AD61-00627A	SPRING-LCD-REVERSE;W-PJ,SUS304	
566	AD61-01017A	GUIDE-LCD;BETA-PJ,POM	
567	AD61-01029A	SPRING ETC-LCD;BETA-PJ,SUS304 WPB	
568	AD61-12033A	BRACKET-NUT;SV-D10,T0.8,T0.8	
569	AD63-00346A	COVER-HINGE BOTTOM;BETA-PJ,ABS 94HB	
570	AD63-00347A	COVER-HINGE TOP;BETA-PJ,ABS 94HB	
571	AD64-00446A	BUTTON-LCD REVERSE;W2-PJ,ABS 94HB	
572	AD64-00809A	BADGE-DSC;ALPHA_PJ,NI,T0.3	
573	AD64-00842A	CASE-LCD BOTTOM(PVI);BETA-PJ,ABS 94V0	SCD80/VP-D80/D80i/D81/D81i/ SCD86/VP-D87D/D87Di
	AD64-00843A	CASE-LCD BOTTOM(SONY);BETA-PJ,ABS 94V0	VM-B710/B3710/B730/ SCD87/VP-D85/D85i/D87/D87i/ VM-B770/B3770
574	AD64-00844A	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D87D
	AD64-00844B	CASE-LCD TOP;BETA-PJ,ABS 94V0	SCD87
	AD64-00844C	CASE-LCD TOP;BETA-PJ,ABS 94V0	SCD80
	AD64-00844D	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D80
	AD64-00844E	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D81
	AD64-00844F	CASE-LCD TOP;BETA-PJ,ABS 94V0	VM-B710
	AD64-00844G	CASE-LCD TOP;BETA-PJ,ABS 94V0	VM-B3710
	AD64-00844H	CASE-LCD TOP;BETA-PJ,ABS 94V0	VM-B730
	AD64-00844J	CASE-LCD TOP;BETA-PJ,ABS 94V0	SCD86
	AD64-00844K	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D85
	AD64-00844L	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D87
	AD64-00844M	CASE-LCD TOP;BETA-PJ,ABS 94V0	VM-B770
	AD64-00844N	CASE-LCD TOP;BETA-PJ,ABS 94V0	VM-B3770
	AD64-00844P	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D80i
	AD64-00844Q	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D81i
	AD64-00844R	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D85i
	AD64-00844S	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D87Di
	AD64-00844T	CASE-LCD TOP;BETA-PJ,ABS 94V0	VP-D87i
575	AD64-00854A	KNOB-LCD;BETA-PJ,ABS 94HB	
576	AD64-70085A	BADGE-SAMSUNG(30);AL,30,SILVER,VP-A850	
577	AD97-04997A	ASSY-HINGE;BETA-PJ	
580	AD07-00030A	PVI LCD	SCD80/VP-D80/D80i/D81/D81i/ SCD86/VP-D87D/D87Di
580	AD07-00024A	SONY LCD	VM-B710/B3710/B730/ SCD87/VP-D85/D85i/D87/D87i/ VM-B770/B3770
581	AD41-00322A	FPC-HINGE	
901	6001-001291	SCREW-MACHINE;CH(0.5),*,M1.7,L4,NI PLT,SWRCH18A,FP	
920	AC60-10019A	SCREW-MACHINE;FZB,FE,+,M2,X4,UP	
902	AC60-10028A	SCREW-MACHINE;ZPC,FE,+,M1.7,X3	
919	AC60-10043A	SCREW-TAPPING;SWRCH 18A,M1.7,X6,+,ZP4	
916	AC60-12128A	SCREW-TAP TITE BH;FE,BH,4 1.7,I4,BLK	

5-8 Ass'y CAMERA

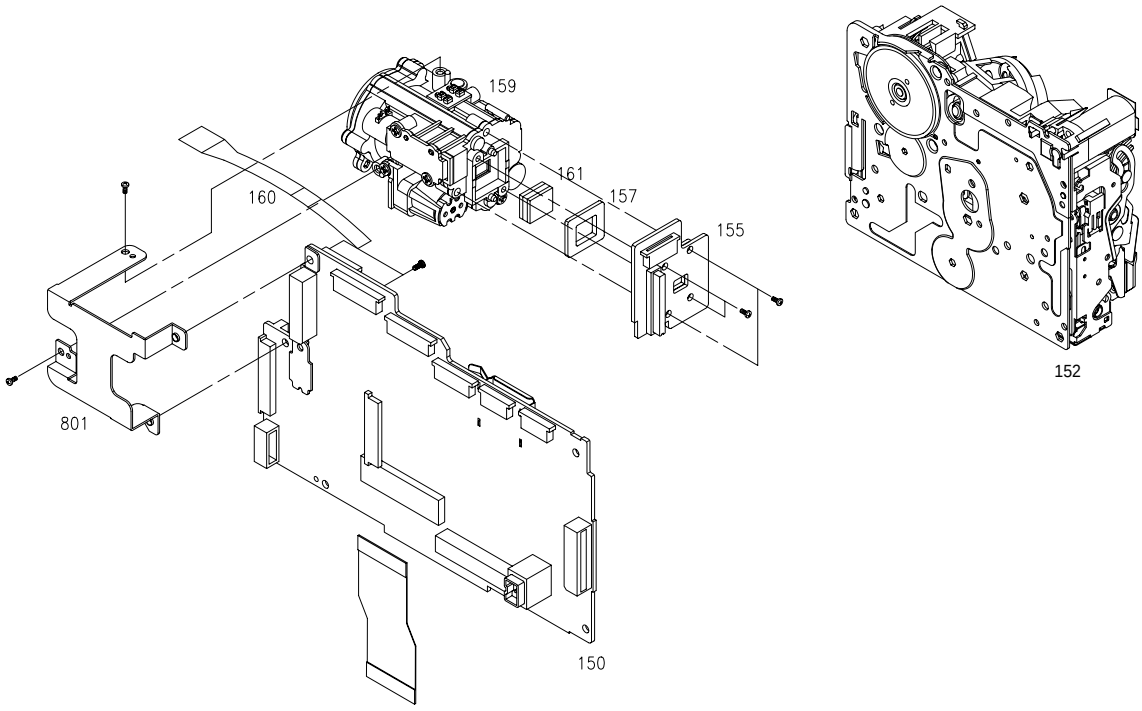

Loc. No	New Part No	Description and Specification	Remark
150	AD97-04923A	ASSY-MAIN BOARD	SCD80
	AD97-04531A	ASSY-MAIN BOARD	VP-D80
	AD97-05012A	ASSY-MAIN BOARD	VP-D81
	AD97-05020A	ASSY-MAIN BOARD	VM-B710
	AD97-05023A	ASSY-MAIN BOARD	VM-B3710
	AD97-05021A	ASSY-MAIN BOARD	VMB730
	AD97-04924A	ASSY-MAIN BOARD	SCD86
	AD97-04925A	ASSY-MAIN BOARD	SCD87
	AD97-05014A	ASSY-MAIN BOARD	VP-D85
	AD97-05016A	ASSY-MAIN BOARD	VP-D87D
	AD97-05018A	ASSY-MAIN BOARD	VP-D87
	AD97-05022A	ASSY-MAIN BOARD	VM-B770
	AD97-05024A	ASSY-MAIN BOARD	VM-B3770
152	AD97-04896A	ASSY-DECK	
155	AD97-04549A	ASSY-CCD BOARD	
157	AD60-00053A	SPACER-CCD	
161	AD29-00019A	FILTER-OPTICAL LPF	
159	AD97-04747A	ASSY-LENS	
160	AD41-00325A	SHOE-FPC	
801	AD61-01003A	BRACKET-LENS	
902	AC60-10028A	SCREW-MACHINE	
916	AC60-12128A	SCREW-TAP TITE	

5-9 Ass'y CVF

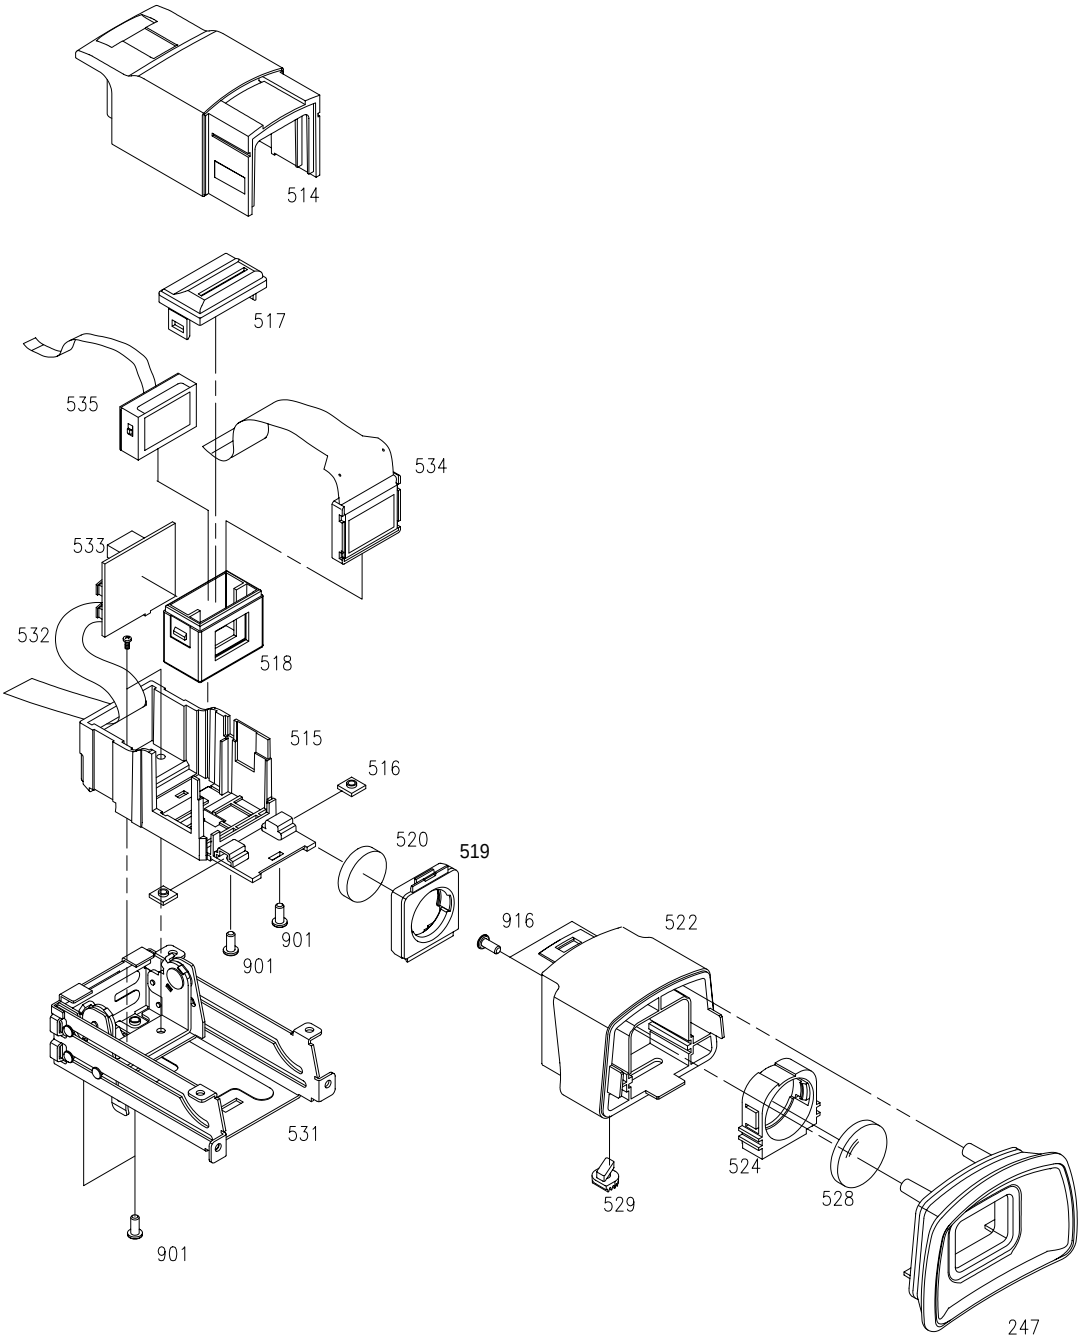
514
517
535
534
533
532
518
515
516
520
519
901
901
916
522
531
901
529
524
528
247

Loc. No	New Part No	Description and Specification	Remark
247	AD97-05130A	UNIT-EYE CUP;BETHA-PJ,ASSY,RUB+AL	
514	AD64-00840A	CASE-EVF TOP;BETHA-PJ,ABS94V0 D/GRAY(VE0812/G3582)	
515	AD64-00839A	CASE-EVF BOTTOM;BETHA-PJ,ABS94V0 D/GRAY(VE0812/G3582)	
516	AD61-12033A	BRKT-NUT;SPTE T0.8	
517	AD61-00319A	HOLDER-CVF TOP;ABS 94VO BLK(0.44)	
518	AD61-01038A	HOLDER-CVF BOTTOM;PC VO BLK/GF(20%,0.44)	
519	AD61-01039A	HOLDER-COVER LENS;BETHA-PJ,ABS 94HB BLK(0.44)	
520	AD67-00026A	LENS EVF M G2;OPT PLASTIC PMMA(0.44)	
522	AD97-04833A	ASSY-CVF LENS;BETHA-PJ,COL	
524	AD61-00665A	HOLDER-CVF LENS;ABS 94HB BLK	
528	AD67-00025A	LENS EVF M G1;OPT PLASTIC PMMA,COL	
529	AD64-00868A	KNOB-EVF;BETHA-PJ,POM BLK	
531	AD97-04801A	ASSY-LINK EVF;BETHA-PJ,ASSY-LINK	
532		FPC-CVF;COL	
533		ASSY-CVF BOARD;PAL/COL	
534		LCD;0.44inch COLOR	
535	AD97-01102A	B/LIGHT;0.44inch COLOR	
901	6001-001291	SCREW-MACHINE;MACHINE 1.7X4,FZB	
916	AC60-12128A	SCREW-TAPPING;TAPPING 1.7X4 FZB	

5-10 Ass'y EVF

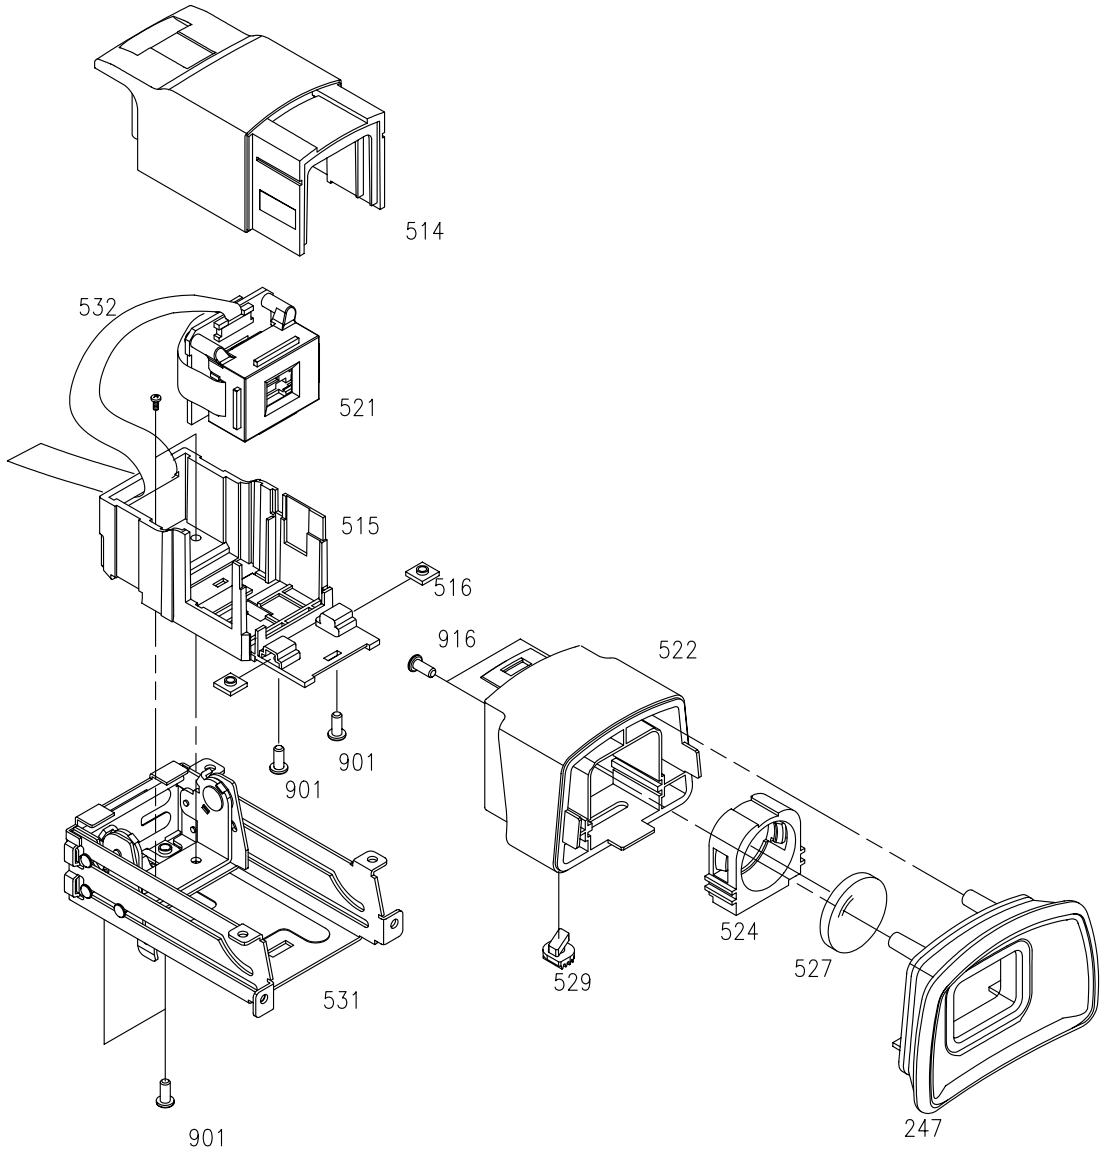

Loc. No	New Part No	Description and Specification	Remark
247	AD97-05130A	UNIT-EYE CUP;BETHA-PJ,ASSY,RUB+AL	
514	AD64-00840A	CASE-EVF TOP;BETHA-PJ,ABS94V0 D/GRAY(VE0812/G3582)	
515	AD64-00839A	CASE-EVF BOTTOM;BETHA-PJ,ABS94V0 D/GRAY(VE0812/G3582)	
516	AD61-12033A	BRKT-NUT;SPTE T0.8	
521	AD97-04454A	ASSY-UNIT EVF;W3-PJ,0.24”,PAL	PAL Models only
521	AD97-04455A	ASSY-UNIT EVF;W3-PJ,0.24”,NTSC	NTSC Models only
522	AD97-04832A	ASSY-EVF LENS;BETHA-PJ,B&W	
524	AD61-00666A	HOLDER-EVF LENS;ABS 94HB BLK	
527	AD67-00027A	LENS EVF M G3;OPT PLASTIC PMMA,B&W	
529	AD64-00868A	KNOB-EVF;BETHA-PJ,POM BLK	
531	AD97-04801A	ASSY-LINK EVF;BETHA-PJ,ASSY-LINK	
532		FPC-EVF;B&W	
901	6001-001291	SCREW-MACHINE;MACHINE 1.7X4,FZB	
916	AC60-12128A	SCREW-TAPPING;TAPPING 1.7X4 FZB	

5-11 Mechanical Parts (1) (MAIN CHASSIS)

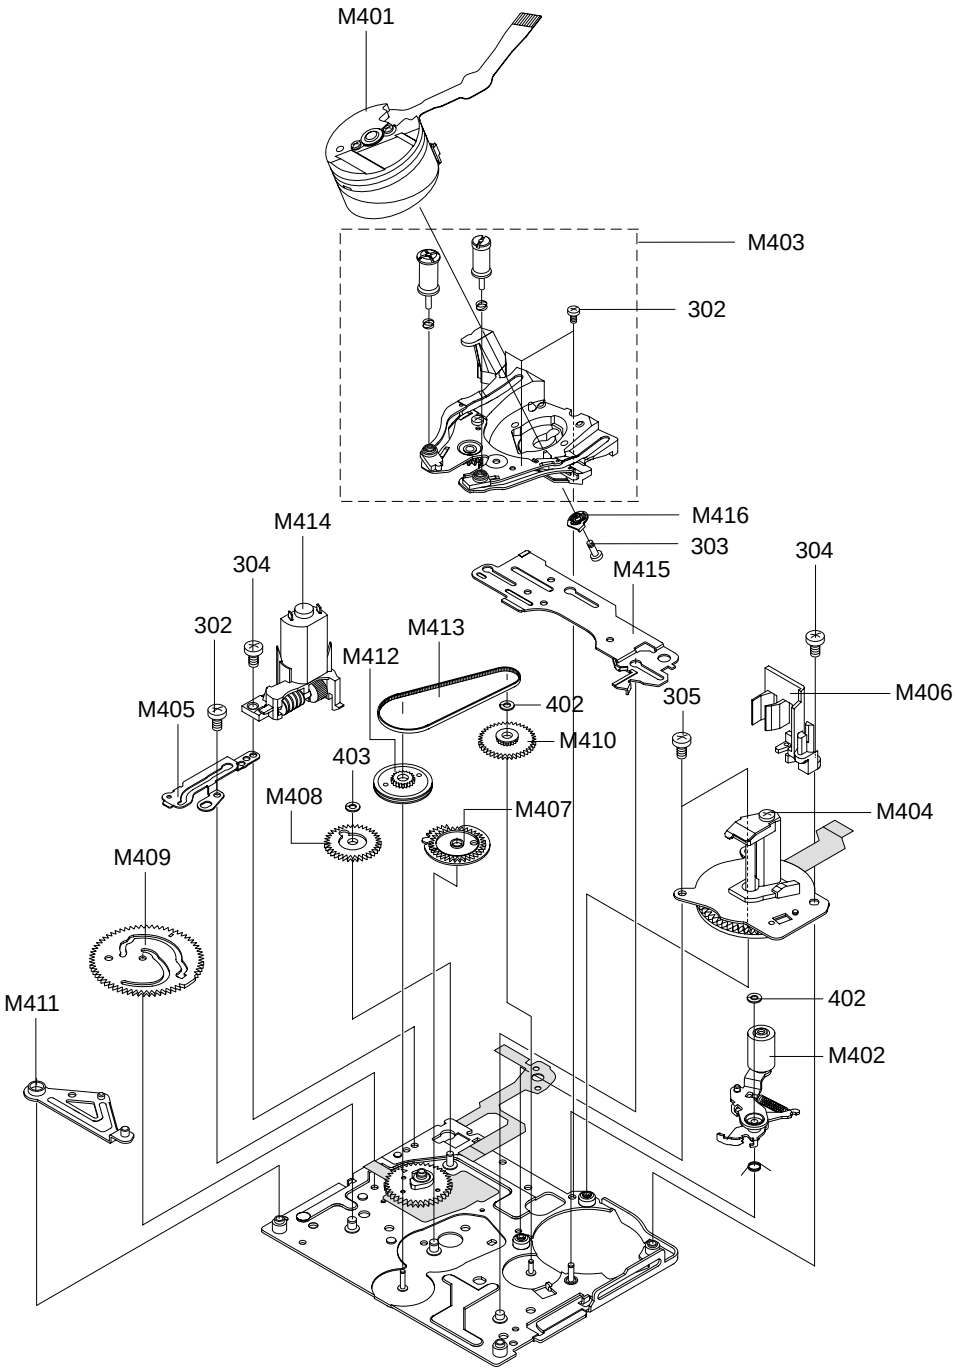

Loc. No	New Part No	Description and Specification	Remark
302	6001-001452	SCREW-MACHINE;BH,+,M1.4,L2.5,BLK,SWRCH18	
303	6001-001451	SCREW-MACHINE;TH,+,M1.4,L4.12,ZPC(YEL),S	
304	6001-001331	SCREW-MACHINE;BH,+,M1.4,L3.0,BLK(LOCK),S	
305	AC60-12113A	SCREW;-,BLK,L2.2,S45C-HC,BH,+,-,M1.4	
402	6031-001417	WASHER-PLAIN;POLYSLIDE,-,ID0.8,D3.0,T0.2	
403	6031-001419	WASHER-PLAIN;LUMINA,CUT,ID1.1,OD2.8,T0.2	
M401	AD97-02552A	ASSY-DRUM REV02;AHS+R/T+MOT+PBT,DD-3,ASS	
M402	AD97-02928A	ASSY-ARM-PINCH-FULL;-,DD-3,-	
M403	AD97-02931A	ASSY-DRUM BASE RAIL;-,DD-3,-	
M404	AD31-00028A	MOTOR-CAPSTAN;-,DD-3,-,-,-,-,-,-,-,-,-	
M405	AD61-00490A	GUIDE-TENSION CAM;DD-3,SUS430 CP,T0.3,-,	
M406	AD61-00496A	HOLDER-FPC SUB;DD-3,DURACON,-,-,-,-	
M407	AD66-00061A	GEAR-CONNECT;DD-3,POM,0.4/0.5,8.5/23,-,-	
M408	AD66-00064A	GEAR-WHEEL;DD-3,POM,0.3/05,30/8,-,-,PCD	
M409	AD66-00065A	GEAR CAM-MAIN;DD-3,SECC,0.5,50,-,-,PCD 2	
M410	AD66-00069A	GEAR-CAPSTAN;DD-3,DYAMID,0.4,28,-,-,PCD	
M411	AD66-00085A	LEVER-CAM;DD-3,SUS430 CP,T0.5,-,-,-,-,-	
M412	AD66-00098A	GEAR-PULLEY ASSY;DD-3,POM+MAGNET,-,-,-,-	
M413	AD66-62001A	BELT-TIMING;DD-C2R,POLYURETHAN,-,L84,-,-	
M414	AD97-02935A	ASSY-LOADING-MOTOR;-,DD-3,-	
M415	AD97-02987A	ASSY-SLIDE-MAIN;-,DD-3,-	
M416	AD61-00558A	PLATE-S/P BASE;DD-3,SUS632 CSP ,T0.15,-	

5-12 Mechanical Parts (2) (SUB CHASSIS)

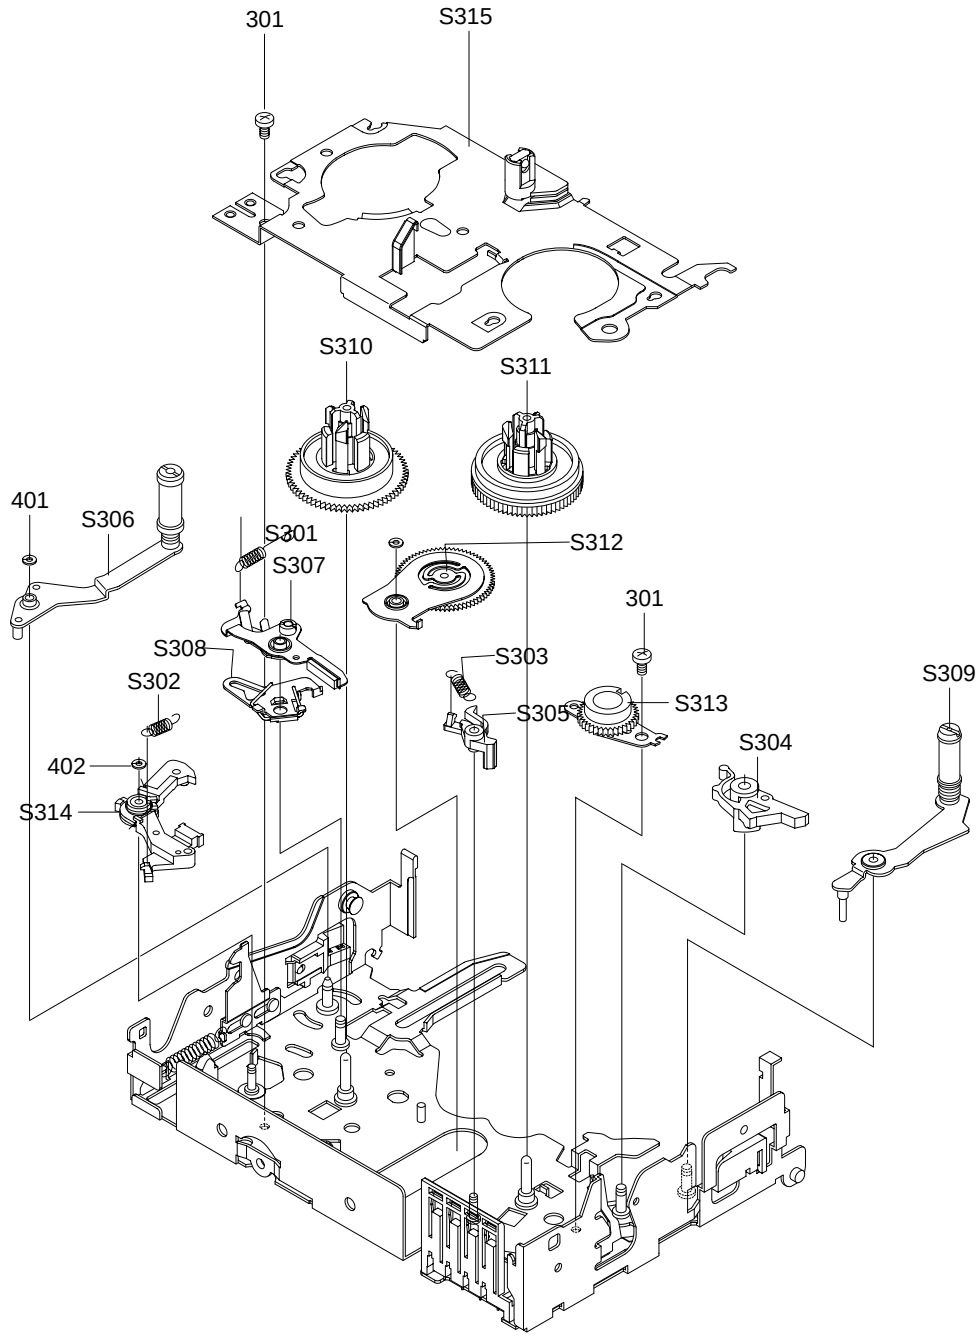

Loc. No	New Part No	Description and Specification	Remark
301	6001-001513	SCREW;BH,+,M1.4,D3.0 , WH	
401	6031-001430	WASHER-PLAIN;POLYSLIDER,-,ID0.8,D2.5,T0.	
402	6031-001417	WASHER-PLAIN;POLYSLIDE,-,ID0.8,D3.0,T0.2	
S301	AD61-00509A	SPRING-TENSION;DD-3,SUS304-WPB,•'0.12,-,	
S302	AD61-00513A	SPRING-BRAKE S;DD-3,SUS304-WPB,•'0.18,-,	
S303	AD61-00659A	SPRING-MAIN BRAKE T;DD-3,SWP-B,•'0.16,-,	
S304	AD66-00090A	LEVER-EJECT;DD-3,POM,-,-,-,-,-,-	
S305	AD66-00093A	BRAKE-MAIN T;DD-33,NYLON,-,-,-,-	
S306	AD66-00108A	ARM-TENSION-ASSY;DD-3,SUS304 CP+ETC,-,-,	
S307	AD97-02932A	ASSY-BRAKE-TENSION;-,DD-3,-	
S308	AD97-02933A	ASSY-RELEASE-T;-,DD-3,-	
S309	AD97-02934A	ASSY-REVIEW-ARM;-,DD-3,-	
S310	AD97-02938A	ASSY-REEL-DISK-S;-,DD-3,-	
S311	AD97-02939A	ASSY-REEL-DISK-T;-,DD-3,-	
S312	AD97-02940A	ASSY-IDLER;-,DD-3,-	
S313	AD97-02941A	ASSY-BRAKE-PULLEY;-,DD-3,-	
S314	AD97-02942A	ASSY-BRAKE-S;-,DD-3,-	
S315	AD97-02943A	ASSY-COVEER-REEL;-,DD-3,-	

MEMO